


Please read all instructions **BEFORE** assembly and **USE** of product.  
**KEEP INSTRUCTIONS FOR FUTURE REFERENCE.**

**baby**  **trend**®

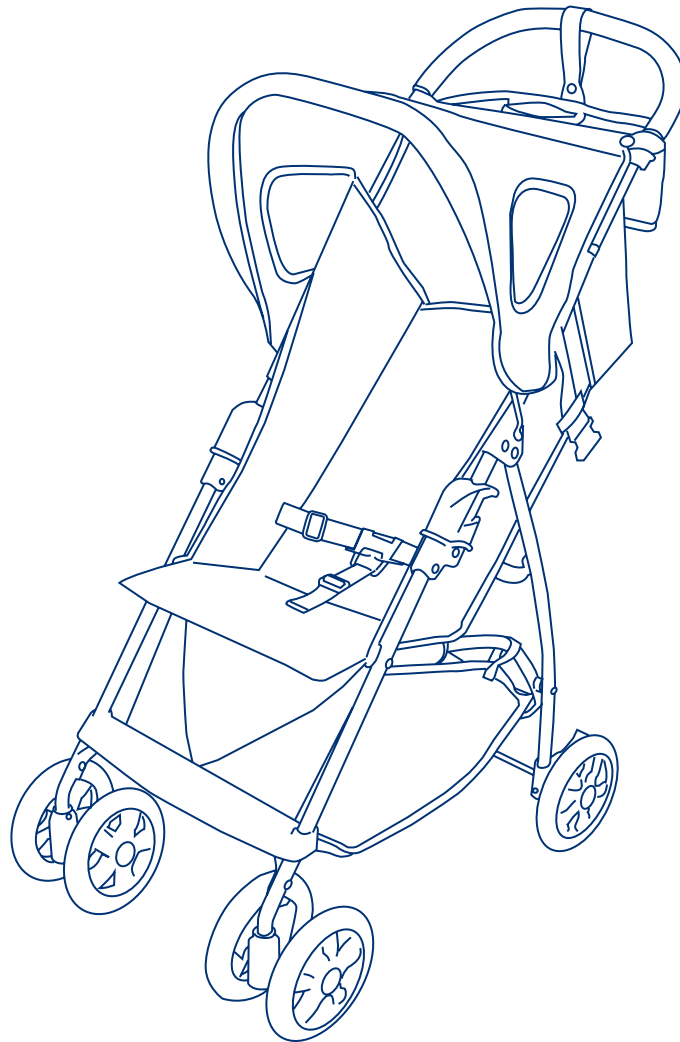

**Model # 1204**

**Trendlite™**

***Instruction Manual***

**Convenience through Innovation and thoughtful design**

**03.07**



## Trendlite™

**⚠️ WARNING:** Please read and follow all instructions to ensure the safety of your child. Keep these instructions for future reference.

**⚠️ WARNING:** Failure to follow these instructions could result in serious injury or death. Avoid serious injury, always use the seat belt and insure that the child is properly positioned according to these instructions.

**⚠️ WARNING:** Never leave a child unattended!

- \* Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller resulting in a hazardous, unstable condition.
- \* The maximum weight that can be carried in the basket is 5 lbs, the parent tray is 3 lbs, exceeding the weight limit may cause a hazardous unstable condition.
- \* Be certain the stroller is fully open and locked before allowing a child near the stroller.
- \* The stroller is designed to be used with a child who can sit up unassisted, approximately 6 months of age. Use of the stroller with a child weighing more than 35 pounds will cause excessive wear and stress on the stroller and may cause hazardous unstable conditions.
- \* **DO NOT** use the stroller on stairways or escalators.
- \* Never allow your stroller to be used as a toy.
- \* To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- \* Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed or discontinue use.
- \* Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

 
*Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00am and 4:30pm Pacific Standard Time or visit us online at [www.babytrend.com](http://www.babytrend.com). Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.*

*To contact us:*

**BABY TREND, INC.**  
1567 S. Campus Ave.  
Ontario, CA 91761

**Parts Hotline:**  
(800) 328-7363  
8:00am to 4:30pm Pacific Standard Time

## PARTS



Front Wheels (2)



Rear Wheels (2)



Locking Washers (2)




Rear Axle (1)



Solid Metal Caps (2)



Hub Caps (2)

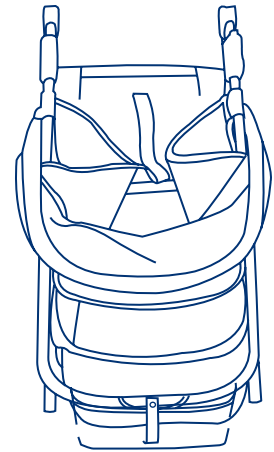

Stroller

## ASSEMBLING

**TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

### TO UNFOLD STROLLER:

- Release the folding latch, which is located on the right side. (Fig. 1)
- Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. (Fig. 2) The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller.



Fig. 1

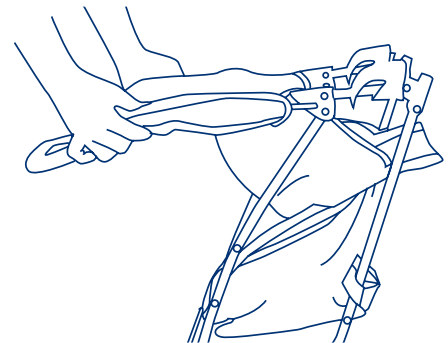


Fig. 2

### ASSEMBLY:

1. Remove stroller from carton. The front wheels, axle and rear wheels need to be assembled and installed prior to use.
2. Unfold stroller. Rest the handle section down so that the rear frame tubes and the front wheel bayonets are both pointing upward. (Fig. 3)
3. Attach front wheels to stroller by placing front wheel housing onto front wheel bayonet. Push downward until it snaps and locks into place. (Fig. 4) Tug each side to ensure proper installation. Note: Front wheels should be able to spin 360° degrees.

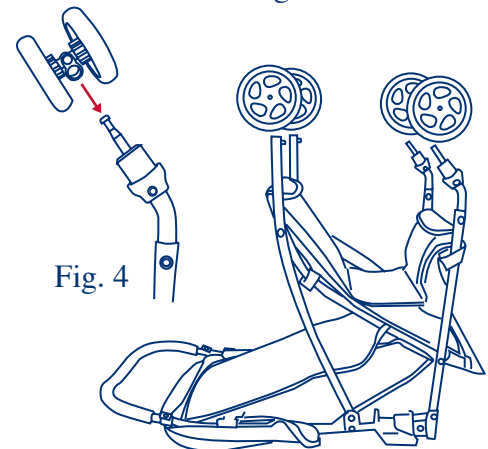


Fig. 4

Fig. 3

4. Attach rear wheels to axle, one side at a time, as follows:

- a. Slide one (1) rear wheel onto axle, brake cluster side first. (Fig. 5)
- b. Place locking washer onto axle and push firmly into place. (Fig. 5a)
- c. Push a solid metal cap onto the end of the axle. (Fig. 5b)
- d. Finish by installing hubcap. (Fig. 5c)

Repeat the above process for the other wheel.

5. Attach the assembled rear wheel and axle assembly to stroller. Place rear wheel housings onto the rear frame tubes with the brake levers facing the rear of the stroller. (Fig. 6) Push down on both housings at the same time, applying equal pressure to both. Push until both side snap and lock into place. Tug on each side to confirm that they are securely attached and locked into place.

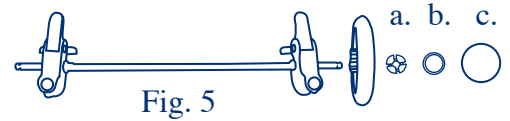


Fig. 5

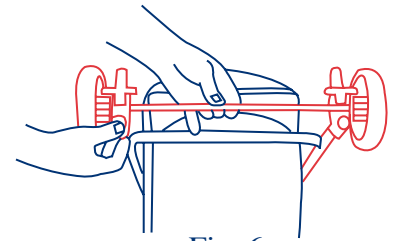


Fig. 6

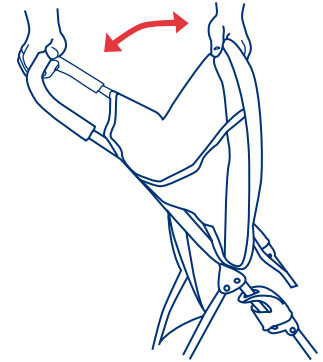


Fig. 7

## CANOPY

- To open the canopy, push forward on the front frame of the canopy. Pull backwards on the canopy frame to fold completely. Always fold the canopy prior to folding the stroller frame. (Fig. 7)

**DO NOT use stroller until assembled completely and you have read and understand all the safety warnings and how to properly use the stroller. If you are having any kind of problem, please contact our customer service department for further information and assistance. Customer service is available M-F, 8:00am to 4:30pm, PST at (800) 328-7363.**

**⚠️ WARNING: Always use the seat belt to avoid serious injury from falling or sliding out.**

## TO SECURE THE CHILD

- Carefully place the child in the stroller seat and bring the seat belt around the child's waist. Place the crotch strap between the child's legs. Insert the male end of each seat belt into the female buckle until snapped into place. Tighten the seat belt to be snug around the child's waist. (Fig. 8)
- To release, apply pressure to both sides of each male clip until the clip is released. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

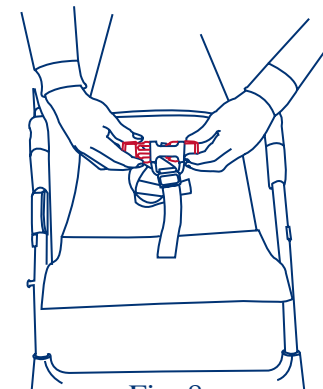


Fig. 8

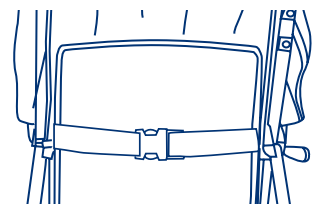
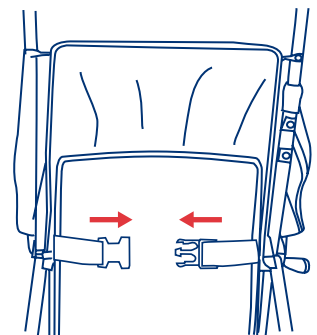


Fig. 9

## SEATBACK POSITIONING

- The seat has a (2) position recline that is controlled by a buckle behind the seat. (Fig. 9) To recline the seat, release the buckle and place the seat in reclined position. For upright position, bring both side belts together and connecting the buckles in the center.

**The upright position should be used only for a child that is at least 6 months old.**

## BRAKES

**⚠️ WARNING:** Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may roll away.

- To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. (Fig. 10) Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever. (Fig. 11)

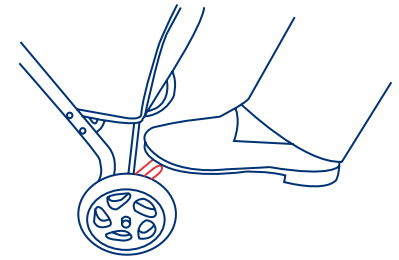


Fig. 10

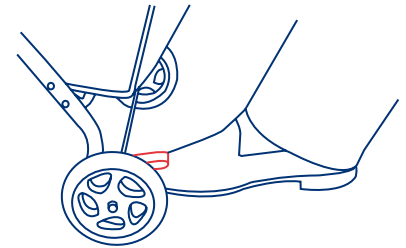


Fig. 11

## TO FOLD STROLLER:

1. Close the canopy as described in the Canopy section above.
2. Release the recline buckles.
3. To fold the stroller, pull upward on the locks located in the center of the stroller and press downward on the handle. (Fig. 12) Once the stroller begins to fold, release the locks and pull the front leg tubes toward the handle. Secure the stroller in the folded position by latching the fold latch, located on the right side of the handle. (Fig. 13)

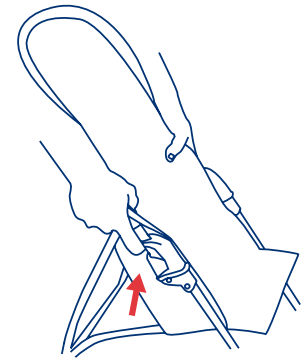


Fig. 12

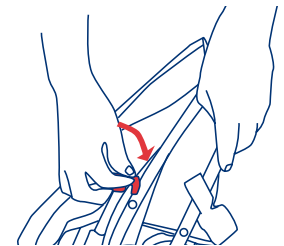


Fig. 13



**IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT  
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363  
BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC STANDARD TIME OR VISIT OUR  
WEBSITE AT WWW.BABYTREND.COM FOR ASSISTANCE.**