


Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

Sunsport Lifestyle Stroller



Instruction Manual



IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT,
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT
1-800-328-7363 BETWEEN THE HOURS OF 8:00 A.M. AND 4:30 P.M. PACIFIC STANDARD
TIME FOR ASSISTANCE. PLEASE HAVE YOUR MODEL NUMBER AND MANUFACTURING
DATE AVAILABLE WHEN YOU CALL. THIS INFORMATION CAN BE FOUND ON A SMALL
STICKER ON THE INSIDE OF THE STROLLER FRAME.

baby trend
Convenience through innovation and thoughtful design

Contact us by mail:
Baby Trend, Inc.
1607 S. Campus Ave., Ontario, CA 91761

Contact us by phone:
1-800-328-7363 (8:00am ~ 4:30pm PST)
or online <http://www.babytrend.com>

baby trend
Convenience through innovation and thoughtful design
www.babytrend.com

⚠ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the safety harness and insure that the children are properly positioned according to these instructions.

⚠ WARNING: Never leave children unattended.


- **CAUTION: DO NOT EXCEED** 4 miles/hour with this stroller.
- **CAUTION:** This stroller is designed for one child only. Use with more than one child may cause the unbalance condition which can injure/ harm your child.
- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- The maximum weight that can be carried in the basket is 5 lbs, child tray and parent tray are 3 lbs each. Excessive weight may cause a hazardous unstable condition to exist.
- Be certain the stroller is fully erect and latched in the open position before allowing the children near the stroller.
- Use of the stroller with children weighing more than 40 pounds or over 40 inches tall, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates, in-line skates, skateboards or bicycles.
- **NEVER** allow your stroller to be used as a toy.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at 1-800-328-7363 between the hours of 8:00 a.m. and 4:30 p.m. (PST). Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.

Contact us by mail:
Baby Trend, Inc.
 1607 S. Campus Ave., Ontario, CA 91761

Contact us by phone:
1-800-328-7363 (8:00am ~ 4:30pm PST)
 or online <http://www.babytrend.com>

SWIVEL FRONT WHEEL




Stroller



Fender Screws




Parent Tray




Fender



Child Tray




Front Wheel



Rear Wheels

OPTIONAL



Infant Car Seat

IMPORTANT! To ensure safe operation of your stroller, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. NEVER use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.


Swivel Front Wheel

Remove stroller from box. The front wheel, rear wheels, fender, and parent tray need to be installed prior to use.

FRONT WHEEL

To attach the front wheel, unfold stroller as described in the section following:

- Lean the stroller backwards so that it rests on the handle and rear axle frame and the front wheel forks are pointing upward. (Fig. 1)
- The front wheel features a quick release attachment system. The quick release must be open enough for the wheel to slide on the forks. Rotate the lever forward to loosen one side (Fig. 2a) and loosen the finger nut on the other side. (Fig. 2b)
- Slide the front wheel onto the front forks. (Fig. 3a) Make sure the front forks are in the position as shown on Fig. 3b.
- Line up the tab on the Retainer Plate with the Slot on both sides of the forks. (Fig. 3c)
IMPORTANT! The tab on the Retainer Plate must be lined up with the slot before tighten the wheel.
- With the wheel in position, tighten the finger nut on the axle until it is very close to contacting the fork and rotate the lever to tighten it as shown in Fig. 4.



- Close the lever (Fig. 5) and you should feel significant resistance and the wheel should be held tightly. If you do not, open the lever and tighten the finger nut a bit more and close the lever again. Continue to do this until the wheel is held tightly in the fork.
DO NOT OVER TIGHTEN.


⚠ WARNING: Always make sure the lever is in closed position before use. Leaving the lever in opened position can cause the wheel to fall off.

- If you experience front wheel wobble that is beyond what is normal for use while walking you may have to adjust the front wheel housing nut. This nut is located under the footrest located at the front of the stroller. You can use a standard crescent wrench to tighten the nut. **DO NOT OVER TIGHTEN** this can cause damage to the wheel housing. (Fig. 6)

FENDER

To secure the fender to the frame, use the 4 screws provided.

- Examine the bottom of the front fender. You will notice four 1/4 inch diameter plastic tubes protruding from the bottom (Fig. 7a).
- These tubes must be lined up with the holes in the front frame assembly (Fig. 7b).
- Line up the front fender and press onto the front frame assembly (Fig. 7c).
- Insert the 4 screws through the underside of the front frame assembly into the front fender's plastic tubes. Tighten the screws only until snug (Fig. 7d). **DO NOT OVER TIGHTEN.**






Fig. 8

REAR WHEEL

Lean the stroller forward to rest on the front wheel. To attach the rear wheels, push each wheel's axle into the plastic corner fitting as shown in Fig. 8. Depress the metal lever on the inside of the corner fitting as you push the axle into corner fitting. When the wheel will not go on any farther, release the lever. Check that the wheel has locked into the corner fitting by pulling on the wheel. If not locked, lift upward on the lever, push the wheel on farther and release lever.

Ensure that the wheels are firmly locked into place. **NEVER** use the stroller if the wheels are not locked into place, contact our customer service department immediately at 1-800- 328-7363, between the hours of 8:00am and 4:30pm PST, for assistance.




Fig. 9

PARENT TRAY

To attach the parent tray, align the fittings on the ends of the parent tray with the fittings on the outsides of the handle. Hook the hole in the parent tray. Pull outward on the opposite end while pushing down on the tray until locked onto the stroller handle. Please be careful not to pinch your fingers when installing the parent tray. (Fig. 9) To remove the parent tray, pull outward on one end of the tray while lifting upward.

⚠️ WARNING: Do not place hot liquids or more than 3 pounds in the parent tray. Serious burns or unstable conditions could result.



Fig. 10a




Fig. 10b

CANOPY

To open the canopy: push forward on the front edge. (Fig. 10a)

To fold the canopy: pull backwards on the front edge. (Fig. 10b)

CHILD TRAY

To attach the child tray:

Push the angled side of the tray onto the post at the end of the right armrest while pressing downward on the snap button, until locking in place. (Fig. 11) Rotate the tray downward until it latches onto the left armrest into place. (Fig. 12)

Note: Check that the snap button comes through and securely in place.

⚠️ WARNING: The child's tray is not a restraint device: always secure your child with the seat belt. **DO NOT** lift the stroller by the child's tray. Use care when attaching the child's tray on the stroller with a child in the stroller.

To access the child seat:

Press the red snap button on the right side and lift upward. The child tray will lift and rotate out of the way to allow access to the seat. (Fig. 13)

To remove the child tray:

Press the red snap button and rotate the tray upward, then release the snap button located on the underside of the right armrest and pull the tray until it released. (Fig. 14)

INFANT CAR SEAT (if equipped)

To attach the Baby Trend Infant Car Seat, recline the seat all the way back.

⚠️ WARNING: Never jog or run with your newborn in the car seat position. Use for strolling only.

- Position the Infant Car Seat, facing toward the rear of the stroller, so that the seat shell goes into the front tray and latches into place. (Fig. 15) Check that the Infant Car Seat is firmly locked onto the front tray before using.




Fig. 11




Fig. 12




Fig. 13




Fig. 14




Fig. 15




Fig. 16

- Check that the front child tray is firmly attached to the stroller armrests. Make sure that the car seat locks into the front child tray. Then turn tabs on stroller frame to lock the front of the car seat into the stroller. (Fig. 16)
- To remove the Infant Car Seat, squeeze the release handle located at the foot-end of the seat and carefully lift upward on the seat. (Fig. 17)




Fig. 17

Before placing your children in the stroller, please follow the instructions below.

⚠️ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. NEVER leave stroller unattended on a hill or incline as the stroller may slide down the hill.

BRAKES

To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. (Fig. 18) Check that the stroller will not move and that both brakes are properly applied. To release, gently lift up on the brake lever.




Fig. 18

⚠️ WARNING: Always lock the front swivel wheel in STRAIGHT position before placing or removing your children from the stroller.

The stroller is equipped with a front wheel locking device. Front wheel lock works in a vertical motion from top to bottom, locking and unlocking the wheel. (Fig. 19)





Fig. 19



⚠️ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

⚠️ STRANGULATION HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

TO SECURE THE CHILD

The shoulder straps of the 5-point harness have 2 attachment positions. Select the position that places the shoulder strap level with, or below the top of the child's shoulder. To adjust harness slot unhook the shoulder strap from the crotch buckle. (Fig. 20) Feed the shoulder strap through the harness spread slots. You can access these slots from the rear of the seat, underneath the fabric. Feed shoulder strap through appropriate slot and reattach shoulder strap to crotch buckle.




Fig. 20

- Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Please see figure 21.




Fig. 21

- To release, apply pressure to both sides of each male clip until the clip is released. See figure 22. This process requires a moderate amount of effort so as to prevent an accidental release by your child.





Fig. 22



SEATBACK POSITIONING

The seat has a multiple position recline that is controlled by a strap and buckle assembly behind the seat. (Fig. 23) To recline the seat, loosen the strap through the buckle and adjust to the required recline position. (Fig. 24) To place the seat back in a more upright position, press upward on the seat back with one hand while pulling the strap through the buckle with the other. The strap will lock automatically.

The upright position should be used **only for a child that is at least 6 months old**. Always re-adjust the safety harness, including the shoulder belts, when repositioning the seatback.

Trigger Release

⚠ WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

TO FOLD STROLLER

Close the canopy as described in the canopy section. Recline seat by releasing buckle as described in seatback positioning section.

The stroller is folded by simultaneously pulling each trigger fold. (Fig. 25) When the fold latches are released, the handle will begin to fall toward the floor. Release the fold buttons and press downward on the stroller handle until the stroller is completely folded. Secure the stroller in the folded position by hooking the fold latch, located on the right side of the stroller, over the rivet that protrudes from the frame. (Fig. 26)

⚠ WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

TO UNFOLD STROLLER

Stand the stroller on the ground with all three wheels touching the ground. Release the folding latch, which is located on the right side. (Fig. 27)

Lift up on the stroller handle with both hands until the stroller frame is erected and locked in the open position. (Fig. 28) The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller.




Fig. 25




Fig. 26




Fig. 27




Fig. 28