


Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

Tag-A-Long® LT Tandem Stroller

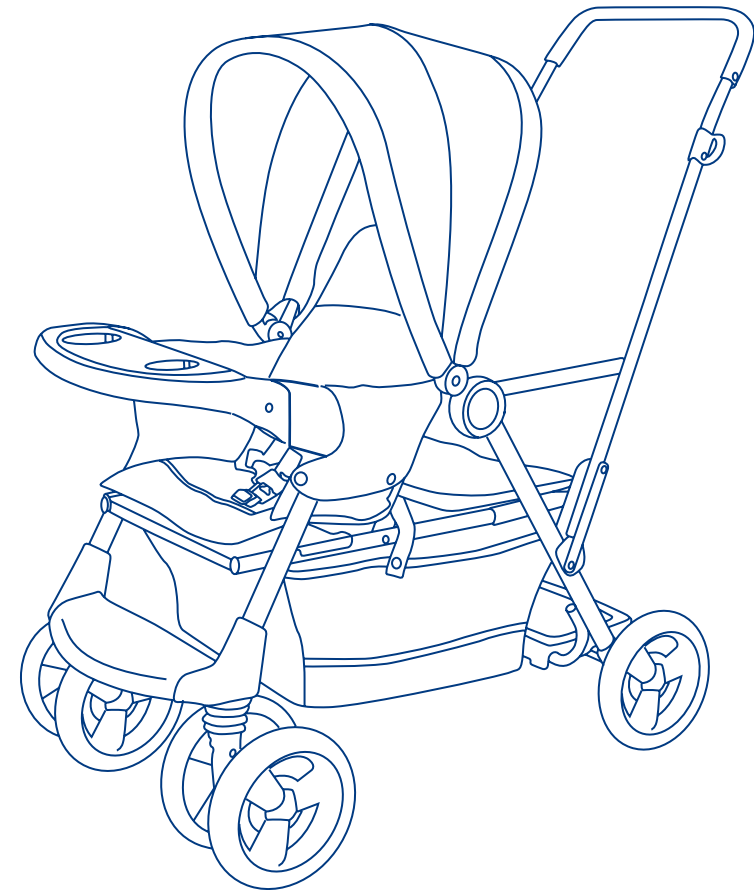

IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT,
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT
1-800-328-7363 BETWEEN THE HOURS OF 8:00 A.M. AND 4:30 P.M. PACIFIC
STANDARD TIME FOR ASSISTANCE. PLEASE HAVE YOUR MODEL NUMBER AND
MANUFACTURING DATE AVAILABLE WHEN YOU CALL. THIS INFORMATION CAN BE
FOUND ON A SMALL STICKER ON THE INSIDE OF THE STROLLER FRAME.



baby trend
Convenience through innovation and thoughtful design

Contact us by mail:
Baby Trend, Inc.
1607 S. Campus Ave., Ontario, CA 91761

Contact us by phone:
1-800-328-7363 (8:00am ~ 4:30pm PST)
or online <http://www.babytrend.com>

Instruction Manual

baby trend
Convenience through innovation and thoughtful design
www.babytrend.com

02.10

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out, always use the safety harness and insure that the children are properly positioned according to these instructions.

⚠️ WARNING: Never leave children unattended.


- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause it to become unstable.
- The maximum weight that can be carried in the storage basket is 5 lbs, parent tray and child tray is 3 lbs. Seat Belt storage pocket: To store seat belt only, maximum weight is 1 lb. Excessive weight may cause a hazardous unstable condition to exist.
- Be certain the stroller is completely opened and locked in place before allowing a child near the stroller.
- The rear stand on platform / jump seat is designed for a child who is at least 2 1/2 years old and is not over 40 inches tall. Use of the stroller with two (2) children weighing more than 40 pounds each, or children totaling more than 80 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** allow your stroller to be used as a toy.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service department to arrange for repair or obtain replacement parts.

If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance. Call toll-free 1-800-328-7363, Monday -Friday, between the hours of 8:30 a.m. and 4:30 p.m. (PST).


Contact us by mail:
 Baby Trend, Inc.
 1607 S. Campus Ave., Ontario, CA 91761

Contact us by phone:
 1-800-328-7363 (8:00am ~ 4:30pm PST)
 or online <http://www.babytrend.com>


Check that you have all the parts for this model before assembling the stroller.

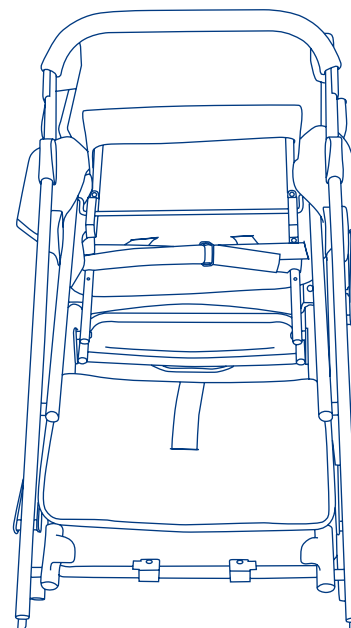


Stroller

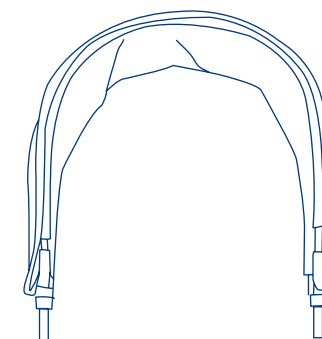


Canopy

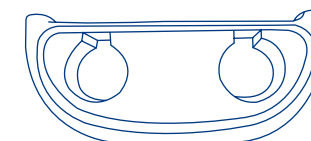

Child Tray

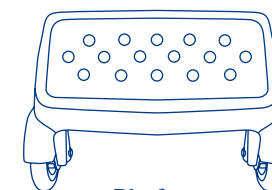

Platform

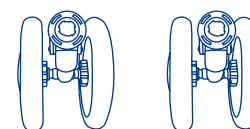

Front Wheel



Rear Axle

IMPORTANT! To ensure safe operation of your stroller, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. NEVER use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.

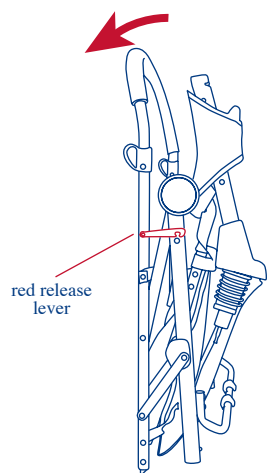


Fig. 1

Remove stroller from box. The front wheels, rear wheels, child tray, and parent tray **MUST** be installed prior to use.

FRONT WHEELS

To attach the front wheels, unfold stroller as described in the section following:

- Unlock the red release lever.
- Unfold stroller frame by pulling backward on the stroller handle. (Fig. 1)

To attach the front wheels, lean the stroller back so that it rests on the handle with the front and rear legs pointing upward. Position the front wheels over the front leg tubes so that the hole in the housing lines up and will slide onto the legs. (Fig. 2) Firmly push down until the wheels lock securely into place. Tug on each wheel to ensure they are both securely attached.

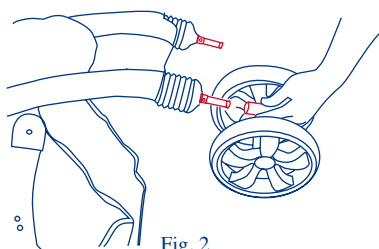


Fig. 2

REAR WHEELS

Position rear axle over the rear leg tubes, brake pedals facing the back. At the same time, push down applying equal pressure to both sides until they lock into place. (Fig. 3)

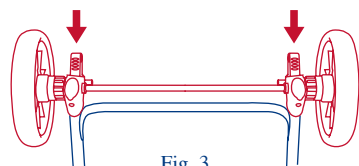


Fig. 3

Note: NEVER use stroller if wheels do not lock into place. If you need assistance, please contact our customer service department at 1-800-328-7363, M-F, between 8am and 4:30pm, PST.

FOOT REST

Push downward on the foot rest until it snaps onto the U-shaped frame cross member. (Fig. 4)

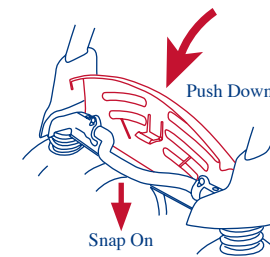


Fig. 4

CHILD TRAY

To attach the child tray:

Insert the tray clip into the fitting on the stroller's fold joint. Check the tray clip locks into place. (Fig. 5a) Push the angled side of the tray onto the post at the end of the right armrest while pressing downward on the snap button, until locking in place. (Fig. 5b) Rotate the tray downward until it latches onto the left armrest into place. (Fig. 6)

Note: Check that the snap button comes through and securely in place.

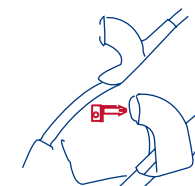


Fig. 5a

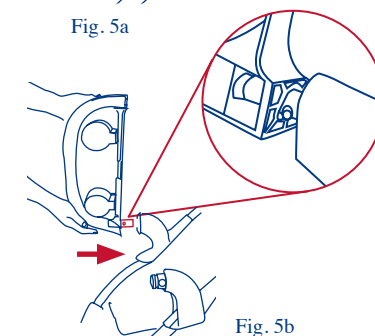


Fig. 5b

⚠ WARNING: The child's tray is not a restraint device: always secure your child with the seat belt. DO NOT lift the stroller by the child's tray. Use care when attaching the child's tray on the stroller with a child in the stroller.

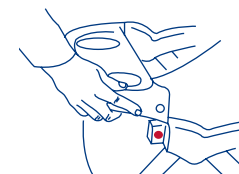


Fig. 6

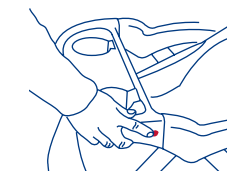


Fig. 7

To access the child seat:

Press the red snap button on the right side and lift upward. The child tray will lift and rotate out of the way to allow access to the seat. (Fig. 7)

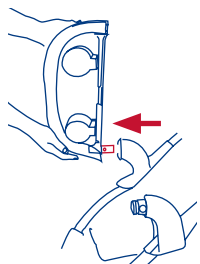


Fig. 8

To remove the child tray:

Press the red snap button and rotate the tray upward, then release the snap button located on the underside of the right armrest and pull the tray until it released. (Fig. 8)

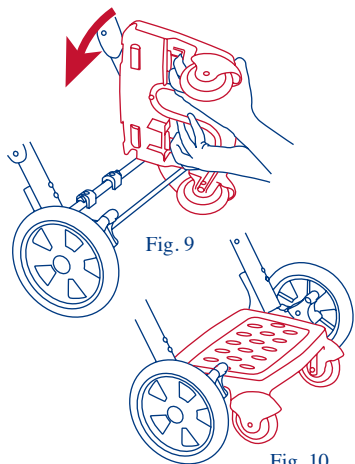


Fig. 9

Fig. 10

PLATFORM

To attach platform:

Squeeze both locking clips with both hands while holding the platform vertically (Fig. 9). Then slowly rotate the platform downward until it rests in place on the axle rod. Once in place release both locking clips. (Fig. 10)

CANOPY

To attach the canopy:

Line up the male fittings on the canopy with the slots on the armrest and push both fittings downward until snapped into place. (Fig. 11) To open the canopy, push forward on the front edge of the canopy while holding the rear of canopy in place. To fold the canopy, push forward on the front edge.

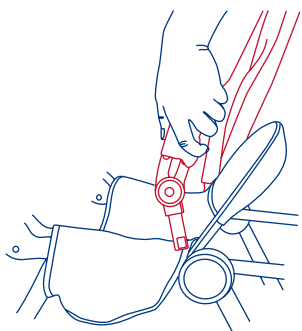


Fig. 11

To remove the canopy:

Press the snap button under the armrest and pull to release the fitting from the slot. Repeat for the other side.

Before placing your children in the stroller, please follow the instructions below.

⚠ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. NEVER leave stroller unattended on a hill or incline as the stroller may slide down the hill.

BRAKES

To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. (Fig. 12) Check that the stroller will not move and that both brakes are properly applied. To release, gently lift up on the brake lever. (Fig. 13)

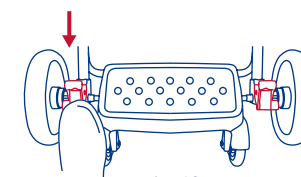


Fig. 12

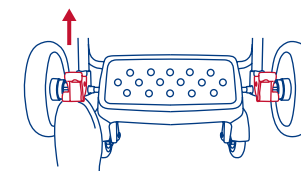


Fig. 13


TO SECURE THE CHILD

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

⚠ STRANGULATION

HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

- Carefully place the child in the stroller seat and bring the safety harness around the child's waist. Place the crotch strap between your child's legs. Insert the Harness Buckles into the Center Clasp with the Red Button. Adjust waist straps for your child's comfort and

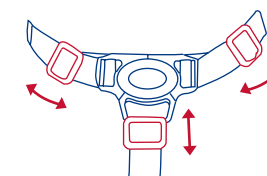

Adjust for a snug fit

Fig. 14

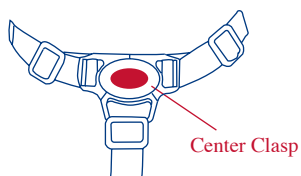


Fig. 15

safety by sliding buckles in either direction. Safety straps are to fit snug around your child. (Fig. 14)

- To release, push Red Button on Center Clasp, the two Harness Buckles will pop free. (Fig 15) This process requires a moderate amount of effort so as to prevent an accidental release by your child.

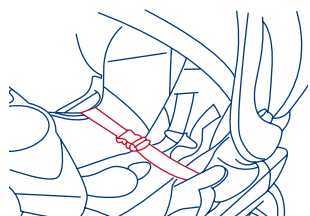


Fig. 16

TRAVEL SYSTEM - Safety Belt

- Strap the safety belt over the infant car seat through the seat belt slots on the infant car seat, connect the buckles together (Fig. 16). The safety belts for the infant car seat is located in small pockets on outer sides of seat pads. Tighten the strap so the infant car seat fits snug and can't move.

IT IS VERY IMPORTANT THAT THE INFANT CAR SEAT STRAP IS ALWAYS TIGHTLY FASTENED AROUND THE INFANT CAR SEAT.

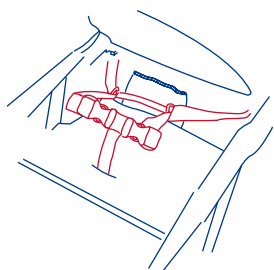


Fig. 17

JUMP SEAT - 3-Point Harness

- Secure the child with the jump seat 3-point harness (Fig. 17) when child is sitting on the jump seat.

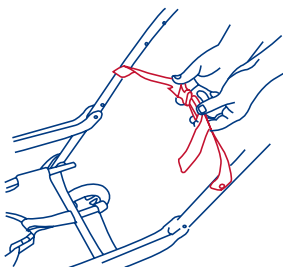


Fig. 18

PLATFORM - Safety Belt

- Secure the stand feature safety belt behind child and engage buckle (Fig. 18). This is the same safety belt you use to secure the rear infant car seat.

TO RECLINE SEAT

FRONT SEAT

The front seat has a two position recline. To recline the seat, rotate the recline bar and press backward on the seat back. (Fig. 19) To place the seat in the upright position, press upward on the seat back while rotating the recline bar.

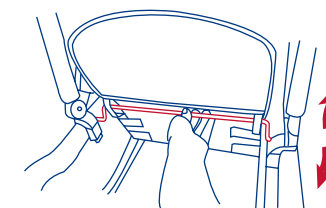


Fig. 19

⚠ WARNING: The upright position should be used only for a child that is at least 6 months old.

⚠ WARNING: Avoid serious injury from falling, ALWAYS use the safety belt to secure the car seat.

Attach the infant car seat:

Position the Infant Car Seat facing toward the rear of the stroller, so that the seat shell goes into the front tray and latches into place. (Fig. 20)

Check that the Infant Car Seat is firmly locked onto the front tray before using.

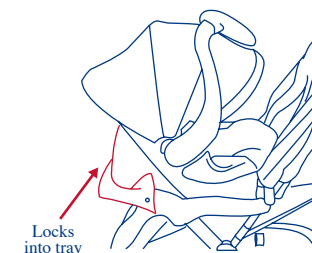


Fig. 20

Check that the infant car seat is firmly locked onto the child tray then **STRAP THE SAFETY BELT OVER THE CAR SEAT** through the seat belt slots on the infant car seat, connect the buckles together. (Fig. 21) Tighten the strap so the infant car seat fits snug and can't move.

IT IS VERY IMPORTANT THAT THE INFANT CAR SEAT STRAP IS ALWAYS TIGHTLY FASTENED AROUND THE INFANT CAR SEAT.

DO NOT USE INFANT CAR SEAT WITHOUT THE SAFETY BELT.

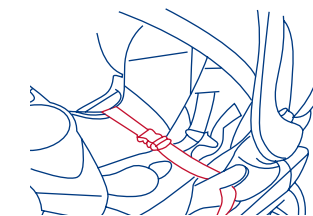


Fig. 21

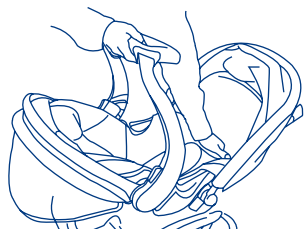


Fig. 22

To remove infant car seat:

Unfasten the safety belt and store in pocket located on each side of seat, then squeeze the release handle located at the foot-end of the infant car seat and carefully lift upward. (Fig. 22)

JUMP SEAT**SIT ON JUMP SEAT**

Have the child sit on the jump seat facing backwards. Secure the child with the jump seat 3-point harness. Part of the 3-point harness is stored in the pocket on the back of the front seat. Put the seat belt around the child's waist, and buckle to the crotch strap (Fig. 23). Adjust the seat belt to be snug around the child's waist.

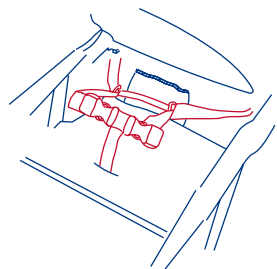


Fig. 23

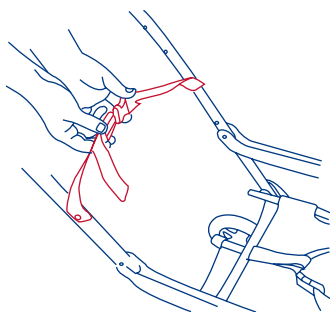


Fig. 24

STAND ON THE PLATFORM

Position the child on the platform on the back of the stroller. Be sure child is standing facing forward and hands are holding frame. Secure the stand feature safety belt behind child and engage buckle (Fig. 24). Be sure that the child's feet are fully on the platform at all times.

CAUTION: Read the following section completely before folding your stroller!

⚠ WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

TO FOLD STROLLER

- Close the canopy as described in the canopy section.
- Pull stroller backward several inches to rotate the front wheels to the front. (Fig. 25)
- The stroller is folded by simultaneously pulling each trigger fold. (Fig. 26) When the fold latches are released, the handle will begin to fall toward the floor. Release the fold buttons and press downward on the stroller handle until the stroller is completely folded. Secure the stroller in the folded position by hooking the fold latch, located on the right side of the stroller, over the rivet that protrudes from the frame. (Fig. 27)

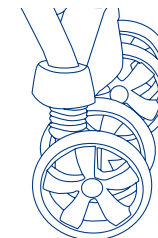


Fig. 25

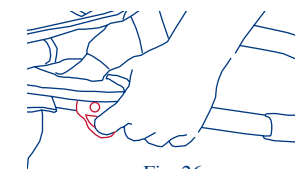


Fig. 26

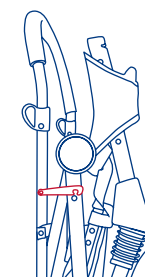


Fig. 27

SEAT PAD

To clean the seat pad, use only mild household soap or detergent and warm water on a sponge or clean cloth.

OTHER

Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.