

Read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

baby trend[®]



Sit N Stand Plus Tandem Stroller
with Car Seat Snap N Go Attachment System

US PATENT #5,664,795

Instruction Manual

Convenience through innovation and thoughtful design

04.08

Copyright © 2006 - 2007, Baby Trend Inc., All Rights Reserved.

WARNINGS

⚠ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the safety belts and insure that the children are properly positioned according to these instructions.

⚠ WARNING: Never leave children unattended.

- * Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause a hazardous, unstable condition.
- * The maximum weight that can be carried in the storage basket is 5 lbs. The maximum weight that can be carried in the Parent Tray is 3 lbs. Seat Belt storage pocket: To store seat belt only, maximum weight is 1 lb. Excessive weight may cause a hazardous unstable condition to exist.
- * Be certain the stroller is completely opened and locked in place before allowing a child near the stroller.
- * The rear stand on platform is designed for a child who is at least 2 1/2 years old and is not over 40 inches tall. Use of the stroller with two (2) children weighing more than 40 pounds each, or children totaling more than 80 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- * **DO NOT** use the stroller on stairways or escalators.
- * Never allow your stroller to be used as a toy.
- * To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- * Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- * Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service department to arrange for repair or obtain replacement parts.


Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at 1-800-328-7363 between the hours of 8:00 am and 4:30 pm Pacific Standard Time or visit us online at www.babytrend.com. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.

To contact us:

Baby Trend, Inc.
1607 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
1-800-328-7363
8:00 am and 4:30 pm Pacific Standard Time

PARTS

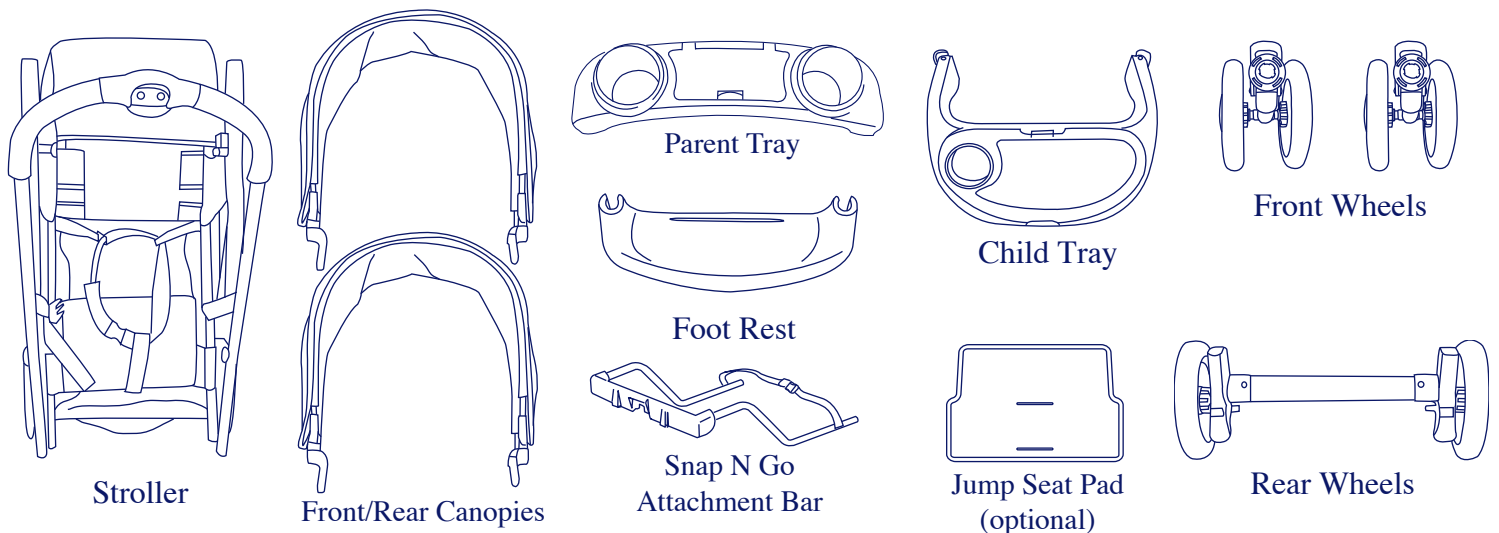

ASSEMBLING

TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY

1. Remove stroller from box. The front wheels, rear wheels, child tray, and canopies need to be installed prior to use.
2. To attach the front wheels, unfold stroller as described in the section following. Fig. 1. Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel tubes are pointing upward. Position the front wheel assembly at the front tube such that the large hole in the swivel assembly will slide onto the front tube. Push each front wheel assembly onto the front tube being careful that wheel assembly locks onto the front leg. Pull on the wheel assembly to ensure that it is securely attached to the stroller. Fig. 2.
3. Lean the stroller forward to rest on the front wheels. To attach the rear wheels, position the rear axle and wheel assembly such that the brake levers are facing to the rear of the stroller. Press the rear wheel assembly onto the rear frame tubes being careful that the push buttons on the forward side of each rear tube engage the hole on the forward side of each rear wheel housing. Pull on the rear wheel assembly to ensure that it is securely attached to the stroller. Fig. 3.
4. Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at (800) 328-7363, between the hours of 8:00am and 4:30pm PST, for assistance.
5. Snap footrest onto front legs of stroller just below the seat. Push downward on the footrest until it locks onto the rivets protruding from both sides of each leg and snaps onto the U-shaped frame cross member. Fig. 4.



Fig. 1.

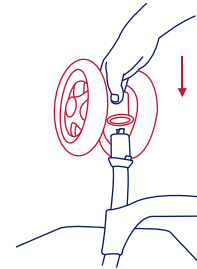


Fig. 2.

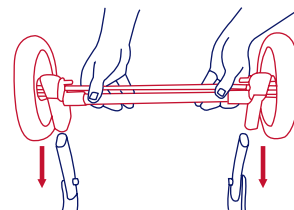


Fig. 3.

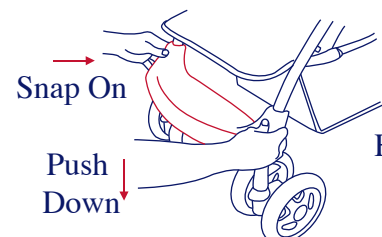


Fig. 4.

6. To attach the front child tray, push the tray onto the front frame tube, lining up the tray between the protruding rivets. Push backward on the latch until snapped into place. The protruding rivets on the outside of the frame tube should be between the tray latch. Check that the tray is securely latched in place. Fig. 5 and Fig. 6.
7. To remove front child tray, pull outward on the latches and pull outward on the tray. Fig. 7. Please note that you may attach or remove one end at a time.

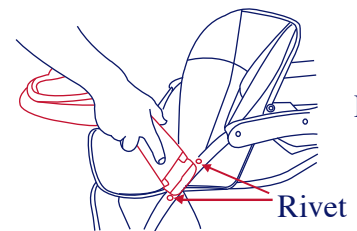


Fig. 5.

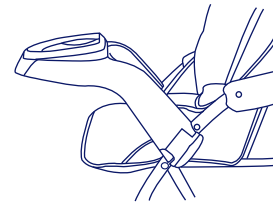


Fig. 6.

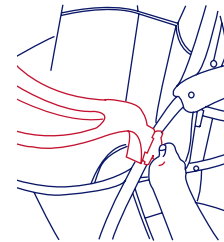


Fig. 7.

8. To attach the rear canopy, line up the male fittings on the canopy with the female fittings on the armrest and push both fittings downward until snapped into place. Fig. 8. Push forward on the front edge of the canopy to open.
9. To attach the rear canopy line up the female fittings of the canopy with the male fittings on the handle frame tube and push downward. Fig. 9.
10. To remove rear canopy reverse installation steps and pull up to remove. Fig. 9A.
11. To remove front canopy depress the plastic attachment and pull upward to remove. Fig. 9B.

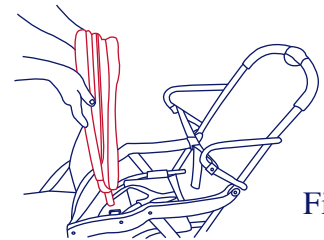


Fig. 8.

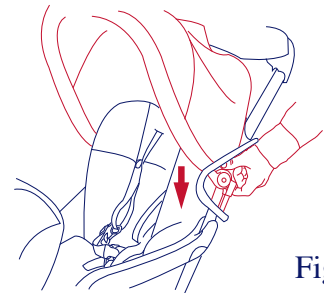


Fig. 9.

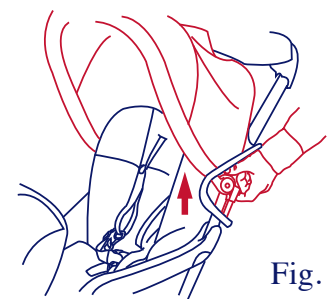


Fig. 9A.

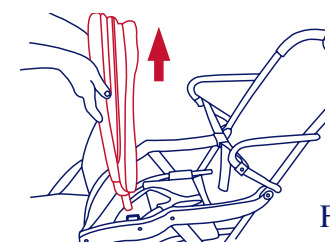


Fig. 9B.

⚠️ WARNING: Avoid serious injury from falling or sliding out. Always use the seat belt.

TO SECURE CHILD

TO SECURE FRONT/REAR SITTING CHILDREN

1. The shoulder straps of the 5-point harness has 2 attachment positions. Select the loop position that places the shoulder strap level with, or below the top of the child's shoulder and feed the shoulder harness under the correct loop. Fig. 10.
2. Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap and between the child's legs. Insert the male end of each shoulder / waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Fig.11.
3. To release, apply pressure to both sides of each male clip until the clip is released. This process requires a moderate amount of effort so as to prevent an accidental release by your child. NOTE: Buckles may be hard to release when 1st used.

TO SECURE REAR STANDING CHILD

1. The rear platform and jump seat are designed to accommodate a child who is at least 2 1/2 years old, has good balance and coordination, and is not over 40 inches tall. Position the child on the platform on the back of the stroller. Be sure child is facing forward and hands are holding frame. Secure the safety belt behind child and engage buckle. Fig. 12.
2. Be sure that the child's feet are fully on the platform at all times.

PLEASE NOTE: When using the rear SEAT you must put the STAND FEATURE SAFETY BELT in the storage location located on the rear of the seat. Please See Fig. 12A

⚠ WARNING: To avoid a possible choking hazard when using the rear seat, put the STAND FEATURE SAFETY BELT in the storage location on the rear of the seat.

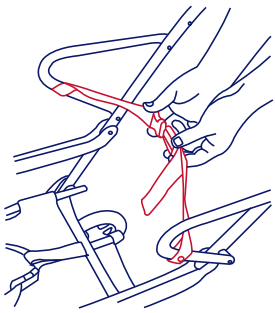


Fig. 12.

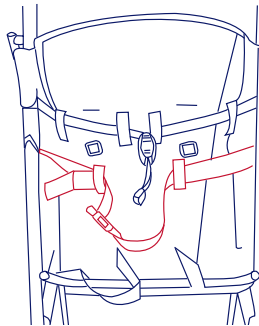


Fig. 12A.

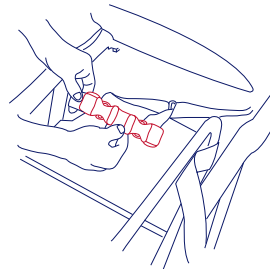


Fig. 12B.

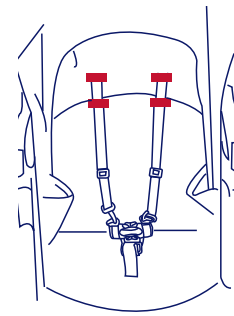


Fig. 10.

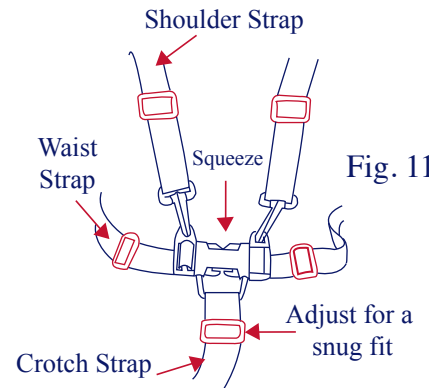


Fig. 11.

TO USE JUMP SEAT

STEP ONE: REMOVING THE REAR SEAT

1. Unsnap Rear Canopy buttons from the back of the rear seat.
2. Remove the rear canopy by sliding the square fittings upward until they disconnect from the frame.
3. Remove the rear seat from the frame by unbuttoning the upper and lower seat back fabric from the frame (Fig. 13 & 14) and unsnapping both front connection points (Fig. 15).
4. Detach the (2) shoulder straps from the frame by folding and sliding the strap through the "D-Ring" located on the end of each strap (Fig 16).
5. Remove Rear Seat.

ATTENTION: Crotch strap will fit through the bottom of the Rear Seat, do not remove crotch strap.

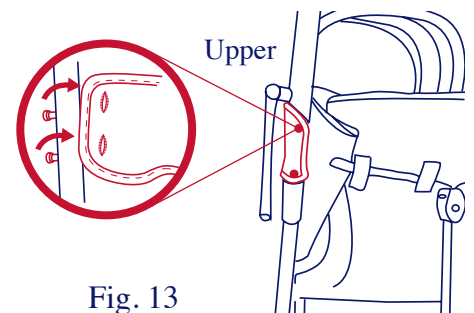


Fig. 13

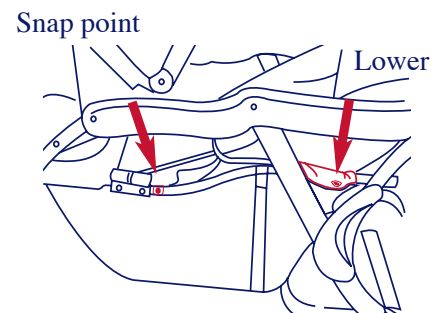


Fig. 14

⚠️ WARNING!!! Do not use jump seat at this point. The harness strap must be adjusted before proper and safe use can commence. Read below for harness adjustment.

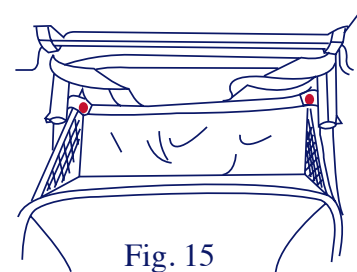


Fig. 15

STEP TWO: ADJUSTING SAFETY HARNESS

1. Disconnect straps on jump seat that run underneath the Jump Platform.
2. Remove Jump Seat Pad. Crotch Buckle will fit through provided slots. DO NOT REMOVE crotch Buckle.
3. Pull Crotch Buckle towards the rear of the Sit N Stand so that the buckle will be orientated closer to the edge of the jump platform (Fig. 17).

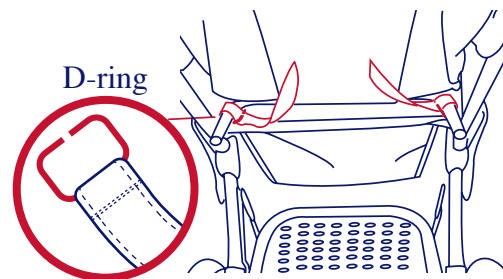


Fig. 16

STEP THREE: INSTALLING JUMP SEAT PAD

1. Feed Crotch Buckle through provided slot closer to the edge of the Jump Pad.
2. Slide the pad over the front of the Jump Seat platform and into the front pocket of the Pad cover.
3. Fold the Pad over the seat and secure the connecting velcro straps together.
4. Have child sit on the jump seat facing backwards. Secure the seat belt, which is attached to the back of the seat, around the child's waist, and buckle to the crotch strap. Fig. 12B. Adjust the seat belt to be snug around the child's waist.
5. To release, apply pressure to both sides of the male clip until the clip is released. This process requires a moderate amount of effort so as to prevent an accidental release by your child.
6. Be sure that the child's feet are fully on the platform at all times.

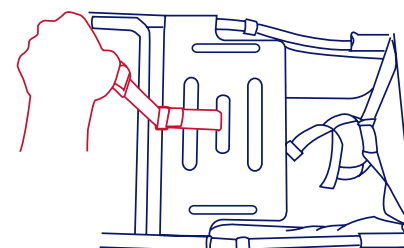


Fig. 17

When you are not using the jump seat harness, place it in the storage location on the rear of the front seat. Fig. 18

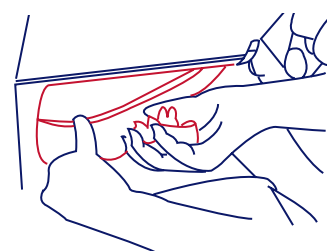


Fig. 18

TO RECLINE SEATS

1. The front seat has a two position recline. To recline the seat, rotate the recline bar and press backward on the seat back. Fig. 19. To place the seat in the upright position, press upward on the seat back while rotating the recline bar.
2. The upright position should be used only for a child that is at least 6 months old. Note: Seat does not fully recline.
3. To recline the rear seat locate the plastic adjuster and squeeze the ends. Loosen or tighten the strap to your desired recline position. Fig. 20.

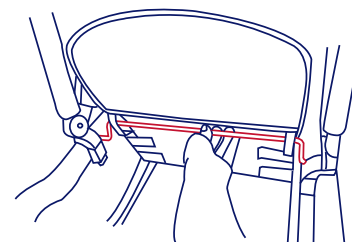


Fig. 19.

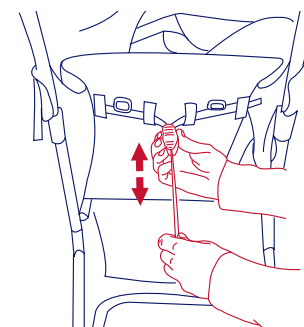


Fig.20.

BRAKES

! WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

1. To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. Fig. 21. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever. Fig. 22.

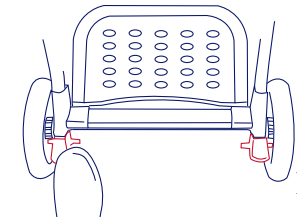


Fig. 21.

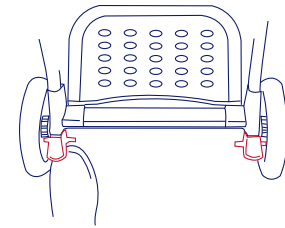


Fig. 22.

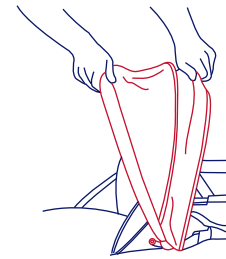


Fig. 23.

1. To open the canopies, push forward on the front frame of the canopies. To close canopies, pull the front edge toward the rear of the stroller until folded. Always fold the canopies prior to folding the stroller frame. Fig. 23.
2. The canopies will ratchet forward or back to block the sun. Pull forward on the front canopy frame tube to move forward. Pull backward on the rear frame tube to move back.

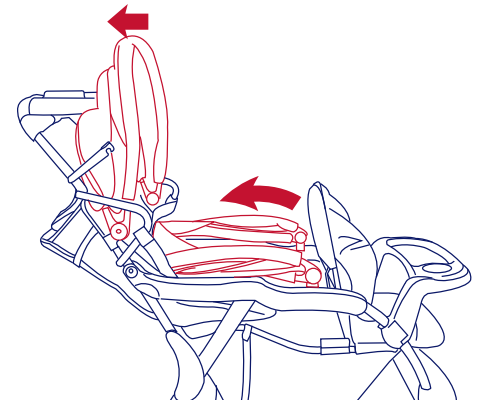


Fig. 24.


TO REMOVE FRONT CHILD TRAY

1. To remove front child tray, pull forward on the locking lever on the tray arms to unlock. Please see Fig. 7. Please note that you may attach or remove one end at a time. Also, the tray may be released on either side and will swing away for easy access to your child.

TO FOLD STROLLER

Do Not allow children near stroller while folding.

1. Close the canopies as described in the Canopies section above. Ratchet the front canopy all the way back. Fig. 24.
2. Unbuckle rear standing safety belt. Fig. 12.
3. To fold the stroller slide the red fold latch safety button in the center of the handle and squeeze the red handle while pushing forward on the handle. Once the stroller begins to fold, release the red handle and pull upward on the child tray until the stroller is folded. Fig. 25.
4. Secure the stroller in the folded position by latching the fold latch, located on the right side of the stroller handle, over the extended rivet on the armrest. You may have to rotate the front wheels to fold the stroller completely. Fig. 26.

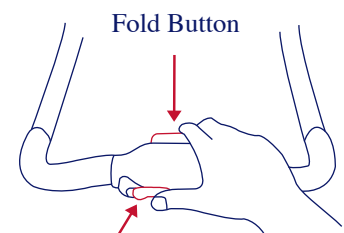

Release Button

Fig. 25.

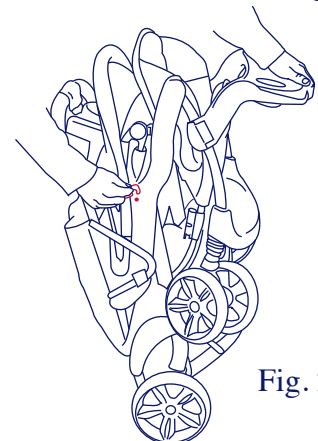


Fig. 26.

TO UNFOLD STROLLER

Do Not allow children near stroller while unfolding.

1. Release the folding latch, which is located on the right side. Fig. 26.
2. Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller.

⚠️ WARNING: Avoid serious injury from falling, Do Not use the Snap N Go bar if it is not securely locked onto both sides of the stroller.

TO ATTACH AN INFANT CAR SEAT

1. Recline the front seat back. Remove the child tray.
2. Slide snap n go attachment bar into the female slots located on the frame tube. **Make sure the snap n go attachment bar locks in place before attaching the car seat.** Fig. 27.
3. Place car seat onto front bar. Fig. 28. NOTE: Most brands of infant car seats will lock onto the front bar, and some brands may simply rest on the front bar, **FOR SAFE OPERATION, IT IS VERY IMPORTANT THAT THE CAR SEAT STRAP IS ALWAYS TIGHTLY FASTENED AROUND THE CAR SEAT.**
4. Strap the safety belt over the car seat and through the seat belt slots on your car seat, connect the buckles together. Tighten the strap so the car seat fits snug and can't move. Fig. 28. **Check that the car seat is secure before using the stroller.**

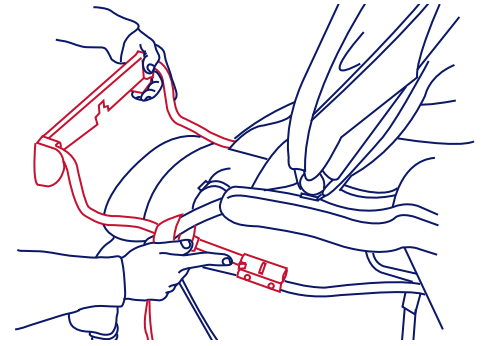


Fig. 27.

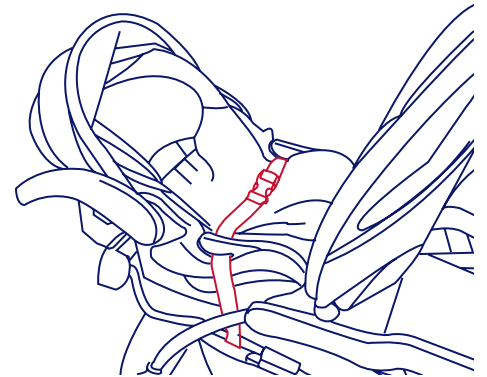


Fig. 28.



**IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT,
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT
1-800-328-7363 BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC
STANDARD TIME FOR ASSISTANCE.**

TO USE JUMP SEAT

Attention Updated Release 04/18/08

⚠ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

To Use Jump Seat you must remove the rear seat.

STEP ONE: REMOVING THE REAR SEAT

1. Unsnap Rear Canopy buttons from the back of the rear seat.
2. Remove the rear canopy by sliding the square fittings upward until they disconnect from the frame.
3. Remove the rear seat from the frame by unbuttoning the upper and lower seat back fabric from the frame (Fig. 13 & 14) and unsnapping both front connection points (Fig. 15).
4. Detach the (2) shoulder straps from the frame by folding and sliding the strap through the “D-Ring” located on the end of each strap (Fig 16).
5. Remove Rear Seat.

ATTENTION: Crotch strap will fit through the bottom of the Rear Seat, do not remove crotch strap.

⚠ WARNING!!! Do not use jump seat at this point. The harness strap must be adjusted before proper and safe use can commence. Read below for harness adjustment.

STEP TWO: ADJUSTING SAFETY HARNESS

1. Disconnect straps on jump seat that run underneath the Jump Platform.
2. Remove Jump Seat Pad. Crotch Buckle will fit through provided slots. DO NOT REMOVE crotch Buckle.
3. Pull Crotch Buckle towards the rear of the Sit N Stand so that the buckle will be orientated closer to the edge of the jump platform (Fig. 17).

STEP THREE: INSTALLING JUMP SEAT PAD

1. Feed Crotch Buckle through provided slot closer to the edge of the Jump Pad.
2. Slide the pad over the front of the Jump Seat platform and into the front pocket of the Pad cover.
3. Fold the Pad over the seat and secure the connecting velcro straps together.

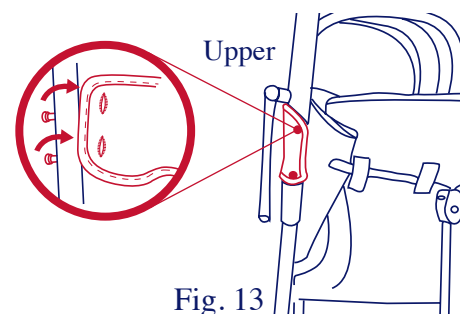


Fig. 13

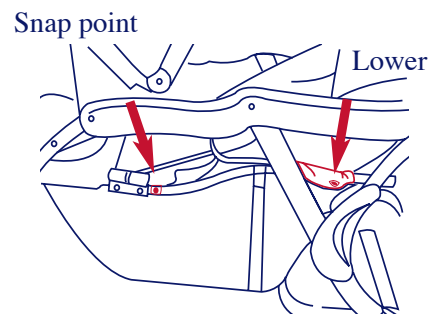


Fig. 14

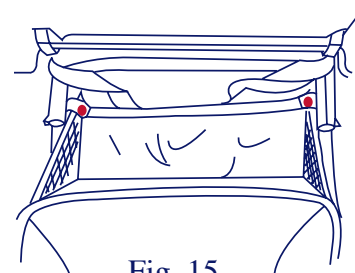


Fig. 15

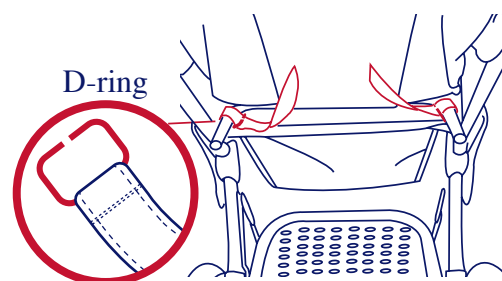


Fig. 16

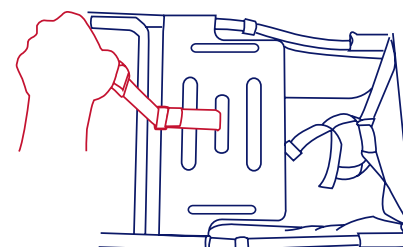


Fig. 17